


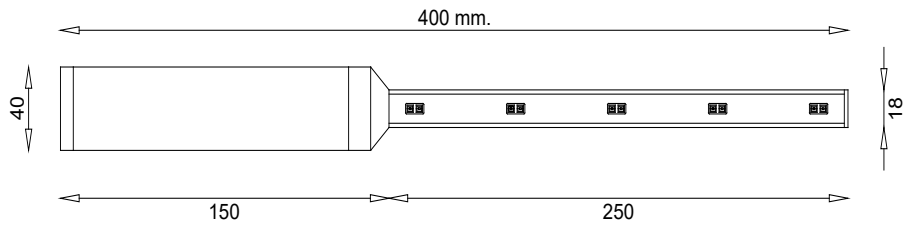


**SANI UV-C**

Model: UV-C 190520 450



Model: UV-C 190520 700

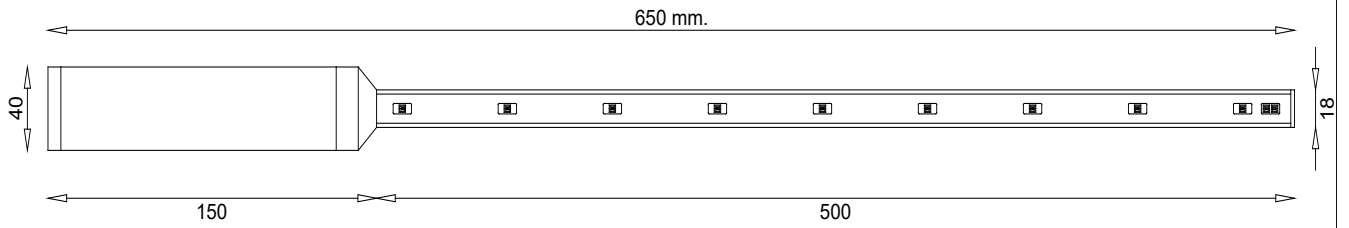

CLOTHES



KEYS



SMARTPHONES



COMPUTERS



MASKS



KITCHEN UTENSILS

### Possible application

- Work surfaces
- Tools and objects
- Underwear and clothing
- Toys

## DESCRIPTION

The portable LED lamp SANI UV-C with rechargeable battery via USB cable 5V with reduced size and weight is useful for quick and effective disinfection of surfaces and objects in just a few seconds. The compact design is easy to use and carry, together with the battery, allows to be used continuously more than 2.5 hours, which is a completely indispensable disinfection tool for everyone.

## CORRECT USE

The portable device SANI UV-C is suitable for disinfection of surfaces of different nature, in the manner described in this document. Any other use or variant of the product in question must be considered unforeseen. The manufacturer does not take liability for damage caused by improper use or improper operation of the appliance.



## CHARACTERISTICS

- High efficiency
- Easy to carry
- Disinfection level of 99.9%

## TECHNICAL DATA

|                                   |                  |                 |
|-----------------------------------|------------------|-----------------|
| Model code                        | UV-C 190520 450  | UV-C 190520 700 |
| Maximum dimensions of the product | 400x40mm         | 650x40 mm       |
| Weight                            | 324g             | 406g            |
| Type of LED                       | UVC + UVA        | UVC + UVA       |
| Power                             | 6W               | 8W              |
| Optimal sterilization distance    | from 10 to 30 mm |                 |
| Duration of work with one charge  | 2,5h*            |                 |
| Charging method                   | micro USB-B 5V   |                 |
| Operating temperature range       | 0-50°C           |                 |
| Photobiological risk              | RG3              |                 |

\* estimated duration based on prolonged use

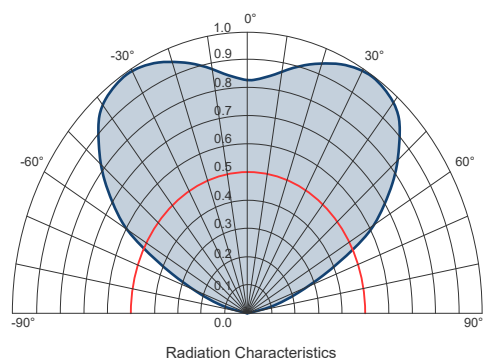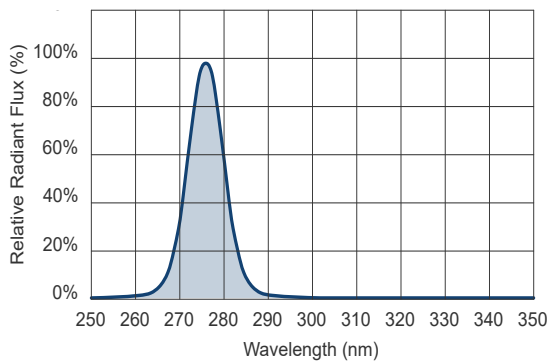

## **! SAFETY INSTRUCTIONS !**

- Do not allow people or animals to be present in the environment in which the appliance operates.
- In addition to the use of all personal protective equipment (PPE), for safe use of the appliance it is necessary to take into account all the provisions related to accident prevention.
- Everyone responsible for the maintenance of the appliance must first read this document.
- During all phases of product installation and maintenance, it is recommended to be careful to avoid damage to people, objects or the appliance itself.
- Use the appliance only for its intended purpose and as described here (disinfection of surfaces and areas). Do not tamper with the device.
- Keep the appliance out of the reach of children.

## **! SAFETY, STORAGE AND DISPOSAL MEASURES!**

- Store the appliance in a dry place and protected from direct sunlight.
- Store the appliance in a temperature between 0 ° C and + 50 ° C.
- Do not use flammable substances near the product.
- Keep the appliance away from heat sources.
- Do not touch the appliance with wet hands
- Clean the appliance only with a microfiber cloth.
- For disposal purposes, the device must be treated as waste from RAEE whose management is regulated by the Legislative Decree. D.LGS 49/2014.

## **! ATTENTION !**

**The SANI UV-C device emits ultraviolet light with high intensity, which can damage the eyes and skin. Strictly follow the safety instructions, contained in this document. Avoid direct exposure of the eyes and the skin of the light emitted by UV-C LEDs Keep away from children.**

